

Parts List:

For one unit shown:

(3502) Horizontal Curved Back Wall:

- A- (2) 122.25" long curved bar w/ quick lock connector attached to middle
- B- (2) 91.50" long straight bar w/ quick lock connector attached to middle
- C- (1) 121.63" long curved bar w/ invisalink connector attached to middle
- D- (2) 39.5" long straight cross bar w/ connector on end
- (1) Fabric cover
- (1) Drop cloth


Assembly Instructions:

See Back Side

WARNING: Hanging system and structure are designed For: (1) indoor use only and (2) to hold the weight of the structure and fabric cover only. No other loads should be applied to this display system.


(3502) 8' x 10' Horizontal Curve Wall

ENTASI

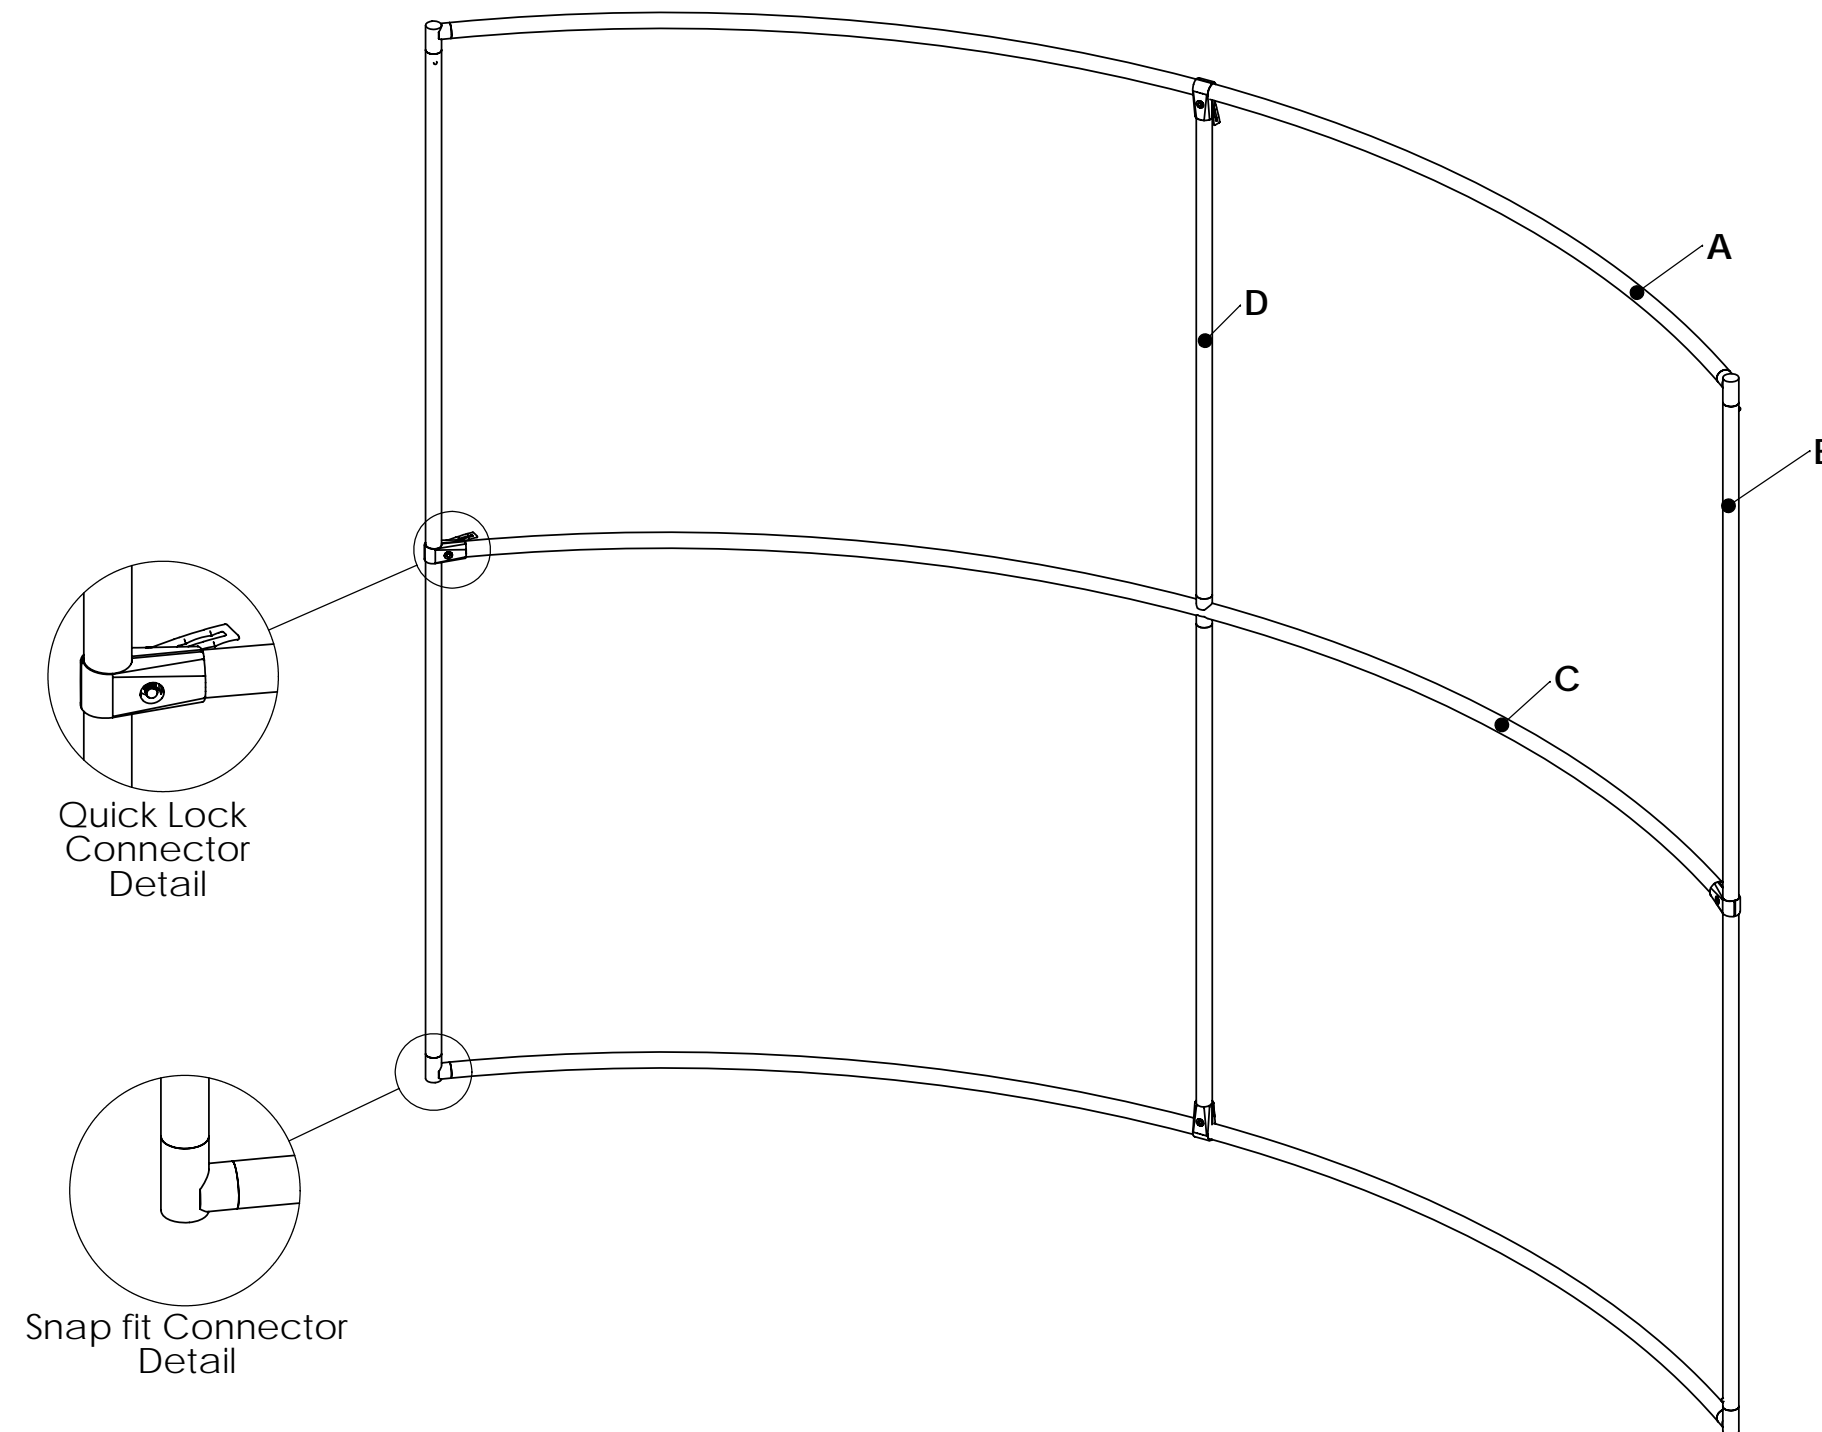



Quick Lock Connector Detail

Snap fit Connector Detail

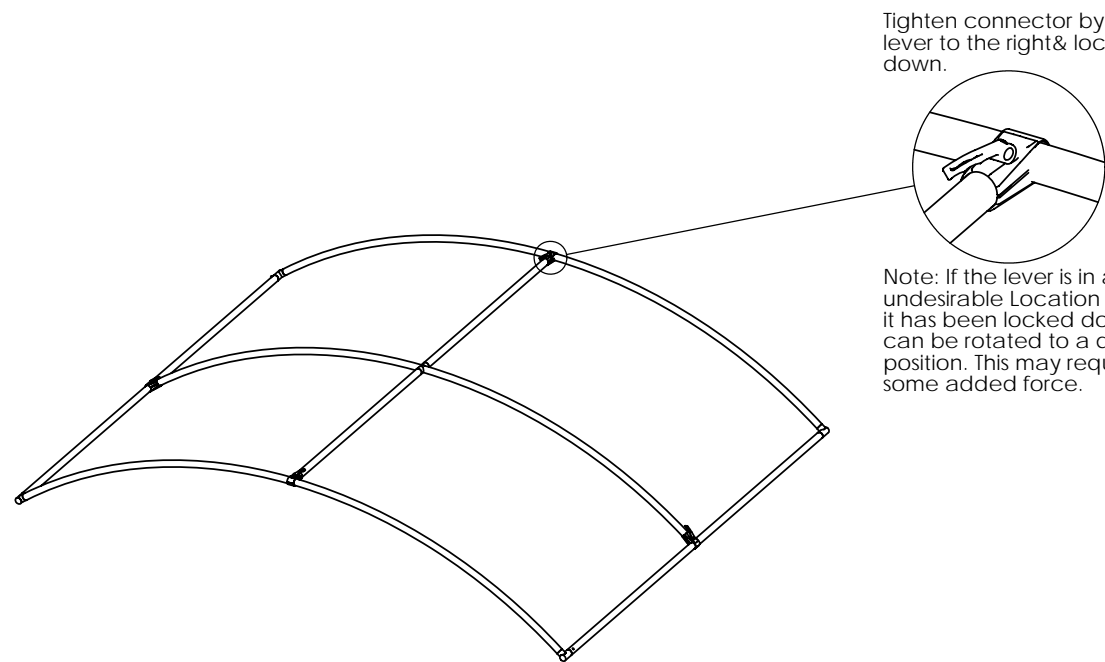

Tighten connector by rotating lever to the right & locking it down.

Note: If the lever is in an undesirable location after it has been locked down it can be rotated to a different position. This may require some added force.

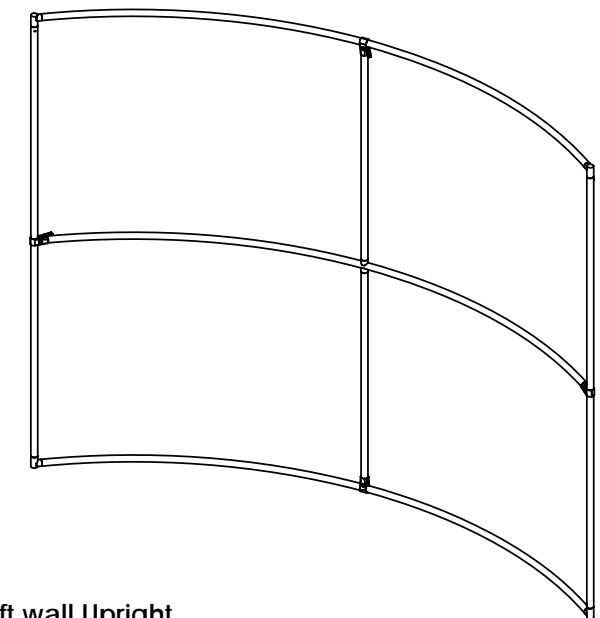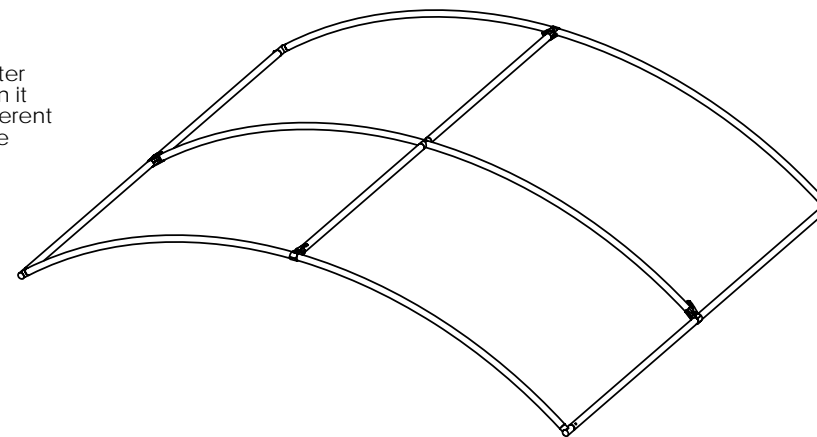

1. Build Back Wall frame on flat Floor Face Down

- * Snap fit all shock corded parts before assembly.
- * Snap fit together (2) 122.25" long Curved bars w/ connectors in middle & (2) 91.50 long curved bars w/ connectors in middle to make outer frame.
- * Create cross bars by snap fitting (2) 39.5" long straight cross bars to (1) 121.63" long curved cross bar. Secure to structure using connectors attached to outer frame.
- * Make sure connectors **ARE LOCKED TIGHT**.

2. Zip Cover over Frame

- * Graphic is on concave (inside) of curve.
- * Properly **POSITION ALL CORNERS** before zipping closed.
- * Make adjustments in cover position with wall laying flat & cover unzipped.
- * To avoid wearing holes in the fabric cover - **DO NOT DRAG WALL**.

3. Lift wall Upright

- * **Lift wall from middle of top bar**, If wall twists, lay flat on ground, correct shape, and re-lift.
- * Remove any small wrinkles with a hand steamer.

Not Enough Parts	- See parts list on front page
Fabric Cover Not Fit	- Assure all 4 corners of cover are positioned over frame corners before starting to zip cover closed.
Hard to adjust cover	- Cover position on frame is easily adjusted when cover is NOT ZIPPED. It is easiest to adjust cover by pulling on un-zipped sides of fabric.
Frame mis-shaped	- Make sure connectors are very tight. Frame warp can be easily corrected by laying structure flat face down on the floor and lifting upright from both sides.
Wrinkles in cover	- Use a hand steamer to remove small wrinkles. Adjust cover position for large wrinkles.